



Maintenance Instructions EleGRIL® Stainless Steel Grates

Your EleGRIL® stainless steel grate will retain its handsome appearance for years with minimal maintenance. The location and traffic load will determine the frequency of cleaning required.

Stainless steel grates themselves are virtually maintenance free. Surface wires can be cleaned with a non-ferrous cleaner such as 3M's Scotch Brite®. **DO NOT USE** steel wool or abrasive pads. The steel in these products will embed in the wires and subsequently rust.

We do not recommend removing the grates for cleaning. If removing a grate is absolutely necessary, it is critical the removal and installation be performed by a trained professional.

For 3/8", 5/8" or 9/8" level bed applications, a high-power vacuum will often remove dust from the recess. For 9/8" deep pit applications, with a drain spray the grate and recess, forcing the accumulation of all dirt into one section. Remove the section per the following instructions, clean the recess and replace the grate.

Carefully remove the section(s) as follows:

1. If the grate is in more than one section, mark the sections and their locations. Sections are not interchangeable and must be reinstalled in the correct locations.
2. Remove the grate section(s) by using a long-shaft Allen wrench. The Allen wrench should be long enough to reach hidden lock-downs when inserting it between the surface wires. **DO NOT ATTEMPT TO REMOVE THE GRATES' ALLEN BOLT LOCK-DOWNS BY PRYING APART THE SURFACE WIRES.**
3. Remove the grate sections and clean the recess. Use a vacuum or broom to clean the surface wires.
4. Reinstall the grate sections, following the original installation instructions and using a long-shaft Allen wrench. Secure the grate, with the hidden lock-downs, to the floor. **DO NOT PRY APART SURFACE WIRES** to reach the hidden lock-downs. Installation instructions are available at www.ardenarch.com.